

The **USB40 MOH Player** Installation & Users Guide



Introduction

The **USB 40** is a solid-state digital messaging system designed to play .mp3 files that require continuous message playback. Messages are stored on a removable USB flash drive. The player is also preloaded with an internal generic hold message that plays only when the USB Drive is removed. Reinserting the USB Drive will automatically resume playback of the message(s) loaded on the Drive within 10 seconds.

Message uploading is simple, just plug the USB flash drive into an available USB port on your computer, and then drop the MP3 file(s) onto the USB Drive.

Non-Proprietary

The USB40 reads standard .mp3 files from an industry standard USB drive.

features:

- **LED Indicator:** Red LED Status Light
- **Message Loading:** USB Drive
- **Memory Type:** Non-Volatile USB Flash
- **Memory Capacity:** Up To 16GB (ships with 128MB drive)
- **Sampling Rate:** 8K to 256K Stereo - Auto-Detected By Player
- **Maximum Files:** Up To 512 Individual MP3 Files
- **Message Playback:** Continuous or Trigger Controlled
- **Output Volume:** Continuously Variable
- **Dual Audio Outputs:** 600 Ohm Line Level – 8 Ohm 3 Watt
- **Power Supply:** 120VAC 60Hz to 12VDC @ 500mA
- **Mounting:** Wall Mounting Included
- **Test Speaker:** Built-In With Push On/Off Switch
- **Dimensions:** 5.8"W X 1.7"H X 5.2"L
- **Weight:** 2.3 Pounds Including Power Supply And Packaging

Installation

Wall Mounting

Mount the USB40 to a clean, dry surface using the screws supplied with your player.

Shelf Mounting

Apply the non-marring feet to the bottom of the player.

1. Using the supplied audio cable connect the 600 ohm audio output on the digital player to the music on hold jack located on the key service unit.
2. Connect the AC wall transformer to the power jack on the digital player and plug the transformer into the wall outlet.
3. Insert MOH Drive into the front of the PD-USB40.

The audio will start playing within 10 seconds. The audio can be previewed by turning the speaker on. Always leave the speaker off for normal use. Use the volume control on the USB40 to adjust the volume.



Message Loading

1. Remove the USB DRIVE from the USB40 player. Insert the DRIVE into the USB port of the computer that contains the new message or messages to be transferred. (A USB extension cable is included if needed.)
2. You may need to wait up to 30 seconds for the computer to recognize the Drive.
3. Double click on My Computer, double click on the MOH DRIVE to display its contents. If "MOH Drive" is not in the list, remove (wait 5 seconds) and re-insert the drive.
4. Delete any unwanted messages on the MOH DRIVE.
5. Drag and drop or copy and paste the new message file to the MOH DRIVE.
6. Take the USB FLASH DRIVE back to the PD-USB40 and insert the drive into the player. The new message will automatically start playing within 10 seconds.

***** To store audio files on the USB Drive, but not have them play, create and store the files in a folder. When you are ready to use a stored file simply drag it out of the folder.**

BUSINESS AUDIO SOURCE
P O B O X 3 3 9 | O L D S M A R F L O R I D A 3 4 6 7 7
8 0 0 . 9 9 3 . 2 2 3 1 | F A X : 8 8 8 . 9 9 3 . 2 2 3 2
W W W . O N H O L D M U S I C S O U R C E . C O M